


USER INSTRUCTIONS

Safe Door in the open position

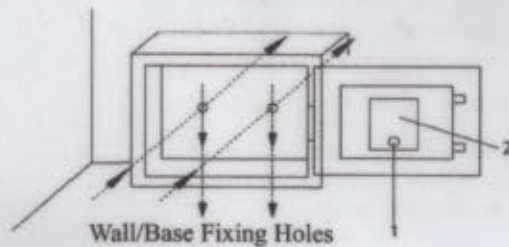

Keypad and Mechanical Override Lock



- 1 - Reset Button
- 2 - Battery Compartment
- 3 - Override Key Lock
- 4 - Red Low Power Warning Light

1. FIRST OPENING AND MANUAL OVERRIDE

This safe is supplied with a secure electronic lock and an emergency manual override lock, for use only if the batteries are discharged or new batteries are being installed. **The override key must not be stored inside the safe.** Please remove the grey plastic cover over the keyhole (3) insert the key and turn anti-clockwise, open the door by turning knob clockwise. With the door in open position insert 4 x AA batteries into battery compartment 2.

2. SETTING PERSONAL CODE AND OPENING

With the door in the open position. Press the red reset button (1) on the back of the door. Enter your personal code (It is recommended to use four numbers) and press button "E" to confirm. You will hear a bleep tone.

3. WARNING

Before closing the door check that the new codes are in operation. Enter your new personal code and press button "E" to confirm. The green indicator will light followed by a beep tone. The safe is now ready for use.

4. LOW POWER WARNING

Replace batteries immediately when the red warning light is illuminated 4. Once the new batteries have been inserted reset the personal code following step 2.

5. MANUAL OVERRIDE

Follow instructions in item 1.

6. REPLACEMENT BATTERIES

When the batteries are low the red indicator light will be illuminated when the keypad buttons are pressed. The lock uses 4 x AA batteries located in the battery holder (2).

Please replace these as soon as possible. On replacing the batteries you must reset your personal code, following the instructions in step 2. Used batteries should not be disposed of with normal domestic waste. These should be disposed of at approved collection points. You may also return used batteries to your Retailer at their expense (where applicable).



7. HOW TO REPLACE BATTERIES

Remove the grey plastic cover from between the circular handle and the keypad. Now insert the override key and turn clockwise. Turn the circular handle and open the safe door. On the inside of the door you will see the cover to the battery pack, remove this; take out the dead batteries and replace with new ones.

Replace the cover to the battery pack; close the door and turn the override key anti-clockwise. Remove the key and replace the grey plastic cover.